



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220



87-07 Kawasaki KLR-650 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see *figure 1*).

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment is at the bottom, facing the right side of the motorcycle and the pressure valve is facing rearward. Install the supplied 3.5mm thick spacers - one on each side of the shock clevis (see *figure 2*) - and tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than 8.13" or shock damage may occur.

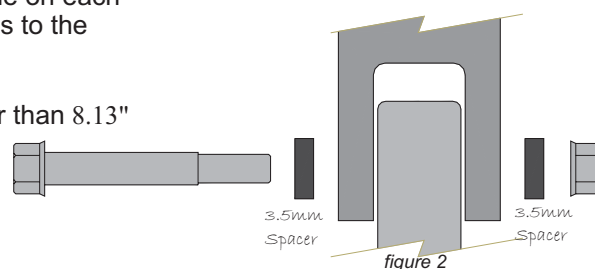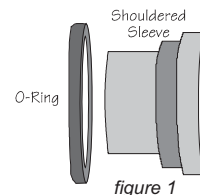

<http://www.progressivesuspension.com>



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220



87-07 Kawasaki KLR-650 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see *figure 1*).

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment is at the bottom, facing the right side of the motorcycle and the pressure valve is facing rearward. Install the supplied 3.5mm thick spacers - one on each side of the shock clevis (see *figure 2*) - and tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than 8.13" or shock damage may occur.

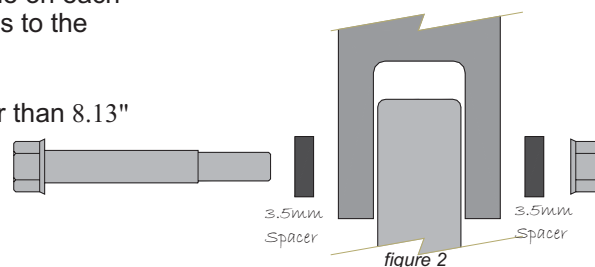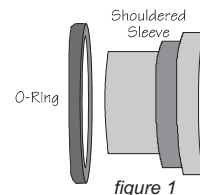

<http://www.progressivesuspension.com>