



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

Kawasaki VN800 Vulcan 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see figure 1).

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment is at the bottom facing the left side of the motorcycle and the pressure valve is facing the rear tire. Tighten shock bolts to the proper torque specifications (refer to your manual).

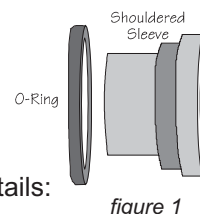


figure 1

Caution: The installed spring length must never be set shorter than 5.25" for the Std. Length (465-1148) or 4.62" for the 1" Lowered (465-1149) or shock damage may occur.

<http://www.progressivesuspension.com>



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

Kawasaki VN800 Vulcan 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see figure 1).

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment is at the bottom facing the left side of the motorcycle and the pressure valve is facing the rear tire. Tighten shock bolts to the proper torque specifications (refer to your manual).

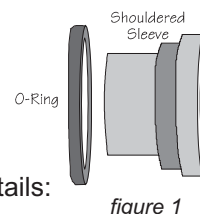


figure 1

Caution: The installed spring length must never be set shorter than 5.25" for the Std. Length (465-1148) or 4.62" for the 1" Lowered (465-1149) or shock damage may occur.

<http://www.progressivesuspension.com>