



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

Yamaha 1100 V-Star 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see figure).

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment is facing the left side of the motorcycle and the pressure valve is facing toward the rear. Tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than 5.25" (4.8" for 1" lowered application) or shock damage may occur.

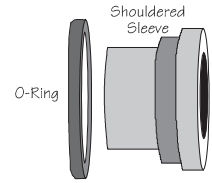


figure 1

<http://www.progressivesuspension.com>



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

Yamaha 1100 V-Star 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see figure).

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment is facing the left side of the motorcycle and the pressure valve is facing toward the rear. Tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than 5.25" (4.8" for 1" lowered application) or shock damage may occur.

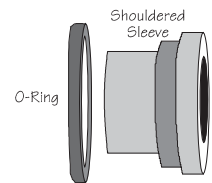


figure 1

<http://www.progressivesuspension.com>