



6911 Marlin Circle, La Palma, CA 90623  
(714) 523-8700, Fax (714) 523-3220

## 07-Later\* Kawasaki KLE-650 "VERSYS" 465 Series Single Shock Supplement


Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top & bottom eyes (see *figure 1*). Note that the narrower sleeves should both be in the top eye, and the wider ones in the bottom eye.

2. Mount the shock as you would your stock shock per your authorized shop manual - noting the following. Make sure the rebound adjustment at the bottom facing upward and the pressure valve is at the top facing upward as well. Tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than the lengths noted for your shock number below or shock damage may occur.

- 465-1182 - no shorter than 124mm (4.88")
- 465-1183 - no shorter than 114mm (4.49")

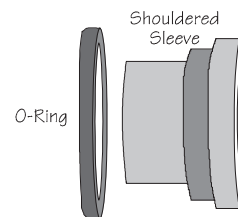

*figure 1*

\*This instruction is appropriate for the models noted; however you must confirm you have the correct kit part number for your specific bike by contacting Progressive Suspension

<http://www.progressivesuspension.com>



6911 Marlin Circle, La Palma, CA 90623  
(714) 523-8700, Fax (714) 523-3220

## 07-Later\* Kawasaki KLE-650 "VERSYS" 465 Series Single Shock Supplement


Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top & bottom eyes (see *figure 1*). Note that the narrower sleeves should both be in the top eye, and the wider ones in the bottom eye.

2. Mount the shock as you would your stock shock per your authorized shop manual - noting the following. Make sure the rebound adjustment at the bottom facing upward and the pressure valve is at the top facing upward as well. Tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than the lengths noted for your shock number below or shock damage may occur.

- 465-1182 - no shorter than 124mm (4.88")
- 465-1183 - no shorter than 114mm (4.49")

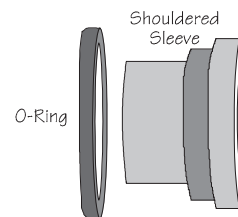

*figure 1*

\*This instruction is appropriate for the models noted; however you must confirm you have the correct kit part number for your specific bike by contacting Progressive Suspension

<http://www.progressivesuspension.com>