

ATTENTION

Statements in these instructions that are preceded by the following words are of special significance:

Warning

This means there is the possibility of injury to yourself or others.

Caution

This means there is the possibility of damage to the vehicle.

Note

Information of particular importance has been placed in italics.

IMPORTANT NOTICE

Caution: Follow instructions in an authorized shop manual or take the vehicle to a competent dealer.

The vehicle must be securely blocked to prevent it from dropping or tipping when the fork springs are removed. Failure to do so can cause serious damage and/or injury.

Progressive Suspension Drop-In Fork Springs are designed to work with the OEM (Original Equipment) forks. Use of this product on any forks other than OEM may produce an unsatisfactory ride and void the warranty.

Prior to installing your Drop-In Fork Lowering kit, you **MUST REMOVE** any previously installed fork lowering kit components.

Warranty

Progressive Suspension Inc. warrants to the original purchaser this Part to be free of manufacturing defects in materials and workmanship for a period of one (1) year from the date of purchase. In the event warranty service is required, you must call Progressive Suspension immediately with a description of the problem.

If it is deemed necessary for Progressive Suspension to make an evaluation to determine whether the part is defective, a return authorization number will be given by Progressive Suspension. The parts must be packaged properly so as to not cause further damage and returned prepaid to Progressive Suspension with a copy of the original invoice of purchase and a detailed letter outlining the nature of the problem. If after the evaluation by Progressive Suspension the part was found to be defective it will be repaired or replaced at no cost to you. If we replace it, we may replace it with a reconditioned one of the same design.

Progressive Suspension shall not be held liable for any consequential or incidental damages resulting from the failure of a Progressive Suspension part. Progressive Suspension shall have no obligation if a part becomes defective as a result of improper installation or abuse.

Warning

Changing the chassis and/or suspension on any vehicle will change the handling characteristics of that vehicle. Care should be taken when operating the vehicle with such modifications while getting accustomed to the new handling characteristics.

Installation

- Read all the instructions carefully before installing this kit on your motorcycle. Use your Harley-Davidson manual as a reference while installing this kit.
- Support and lift the motorcycle securely so the front wheel is just off the ground and able to spin with light brake drag. The balance point is toward the front of the engine.
- Remove any accessories necessary to gain access to the fork caps and triple trees.
- If your bike is currently equipped with any type of fork lowering kit, such as a standard Progressive Suspension lowering kit or other, You **MUST** remove that kit before installing this Drop-In Kit. The Drop-In fork kit is designed to work **ONLY** with the Stock fork rebound or top out springs. **Figures 1 & 2**

Warning

Failure to remove existing fork lowering kit components will result in unsatisfactory performance and may lead to fork damage, loss of vehicle control and injury.

- Remove the handle bars if they are directly above the fork caps to allow for the removal of the fork springs.
- Loosen the pinch bolts on the upper triple clamp. Failure to do so will make fork cap removal very difficult and potentially damage the caps and or fork tubes. **Figure 3**
- Carefully remove the fork cap.

Warning

CAUTION The fork caps are under spring pressure and care must be taken as they are removed to avoid injury! Keep downward pressure on the caps as you unscrew the final threads, this will minimize the spring “jump” that will occur as soon as the cap is fully un-threaded. **BE CAREFUL!**

- Remove the stock fork spring, washers and spacers. You will reuse the stock washers.
- For optimum performance we highly recommend the forks be thoroughly cleaned and new fork oil installed per your authorized Harley-Davidson manual.

Caution

While the installation of this Drop-In Fork Spring kit will not change the compressed length of the front forks, we have found that some bikes may not have adequate clearance between the fender, fairing and / or accessories. So with the fork springs removed, lift the front forks, or lower the bike to completely compress the front forks. With the forks fully compressed, check for adequate clearance between the tire, fender, fairing, crash bar, accessories, etc. You must correct any clearance issues prior to installing this kit to avoid vehicle damage and / or vehicle control problems.

- Determine the correct PVC spacer length for your year model bike from the Chart in **Figure 4**. You may need to cut the supplied spacer to your proper length.
- With the front forks fully extended again, insert the Drop-In Fork Spring into the fork tube, then insert the Drop-In Compensation Spring, Washer and PVC spacer. **Figure 5**
- Reinstall the fork cap. The design of this kit makes this very easy as the only spring pressure you will feel during cap installation is from the Drop-In Compensation Spring which is only a light pressure by design.
- Tighten the fork cap, the triple clamp pinch bolts and reinstall the handle bars and any accessories removed according to their manufacturers instructions.
- Remove motorcycle from lift and re-check all fasteners for proper tightness.

FINE TUNING

- Front ride height can be adjusted by changing the PVC spacer length. We recommend making changes in .25" increments. Do not vary the spacer length by more than .50" shorter or 1.00" longer than the length specified for your model in the Chart above. A longer spacer will raise the front end, a shorter spacer will lower the front end.
- The operator must use extreme caution when operating a modified motorcycle, particularly while getting familiar with its altered handling characteristics.




Figure 1




Figure 2

Prior to installing your Drop-In Fork Lowering kit, you **MUST REMOVE** any previously installed fork lowering kit components, such as the 1 or 2 additional top out springs illustrated above. Additional top out springs are common in many such kits.

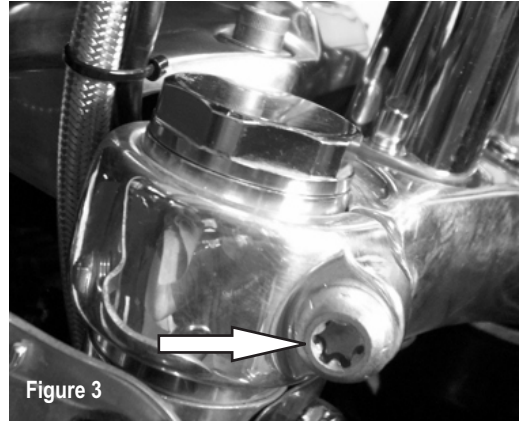


Figure 3

CHART PVC SPACER LENGTH

YEAR	MODEL	SPACER LENGTH
2006-2008	FXD\B\C\L\135	1.00"
2006-2008	FXDWG	3.30"

Figure 4

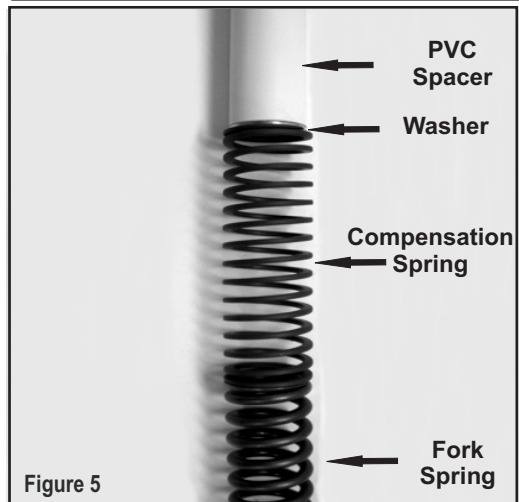


Figure 5