


## Honda CBX1000 1981-1992 465 Series Single Shock supplement

***Please Read these instruction completely before starting!***

1. Shouldered sleeves & O-rings should already be installed in both shock eyes. If not, grease the inner surface of the eyes and insert the sleeves & O-rings.

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the shock is mounted with the rebound adjustment at the bottom and both the nitrogen pressure valve and rebound adjustment facing the rear of the motorcycle. Tighten shock bolts to the proper torque specifications (*refer to your manual*).

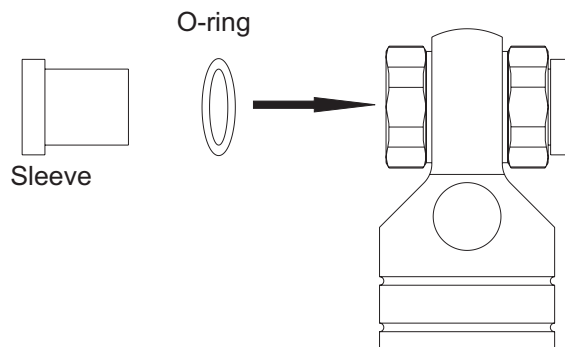


***Caution: The installed spring length must never be set shorter than 5.00" or shock damage may occur.***

## Honda CBX1000 1981-1992 465 Series Single Shock supplement

***Please Read these instruction completely before starting!***

1. Shouldered sleeves & O-rings should already be installed in both shock eyes. If not, grease the inner surface of the eyes and insert the sleeves & O-rings.

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the shock is mounted with the rebound adjustment at the bottom and both the nitrogen pressure valve and rebound adjustment facing the rear of the motorcycle. Tighten shock bolts to the proper torque specifications (*refer to your manual*).

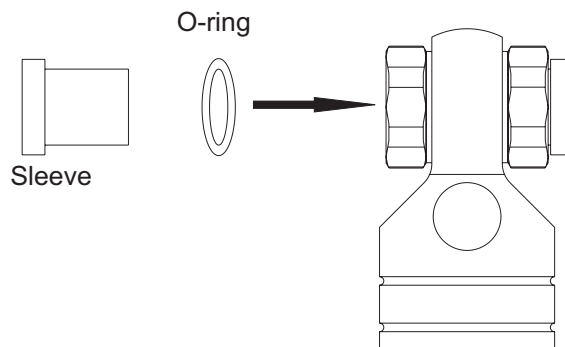

***Caution: The installed spring length must never be set shorter than 5.00" or shock damage may occur.***