


Honda ST1100 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eyes. If not, insert sleeves with O-rings in both top and bottom eyes (see figure). Note: The widest sleeves go in the top eye.

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment and the pressure valve is facing to the rear with the **rebound adjustment at the bottom**. Tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than 6.87" or shock damage may occur.

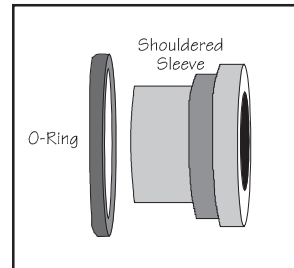

Honda ST1100 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eyes. If not, insert sleeves with O-rings in both top and bottom eyes (see figure). Note: The widest sleeves go in the top eye.

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment and the pressure valve is facing to the rear with the **rebound adjustment at the bottom**. Tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than 6.87" or shock damage may occur.

