



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

Kawasaki ZX-1400 465 Series Single Shock Supplement

Please read these instructions completely before starting!

CAUTION Be sure to follow all the instructions that came with your extended swing arm or swing arm extension kit installation to insure you have adequate tire to fender / tail section / chassis clearance through the entire range of suspension travel. Failure to do so can result in bike damage and personal injury.

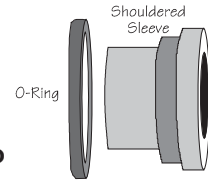


figure 1

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see figure 1).
2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjuster is at the bottom facing the right hand side of the motorcycle and the pressure valve is facing towards the rear wheel . Tighten shock bolts to the proper torque specifications (refer to authorized shop manual).

Caution: The installed spring length must never be set shorter than 5.25" or shock damage may occur.

<http://www.progressivesuspension.com>



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

Kawasaki ZX-1400 465 Series Single Shock Supplement

Please read these instructions completely before starting!

CAUTION Be sure to follow all the instructions that came with your extended swing arm or swing arm extension kit installation to insure you have adequate tire to fender / tail section / chassis clearance through the entire range of suspension travel. Failure to do so can result in bike damage and personal injury.

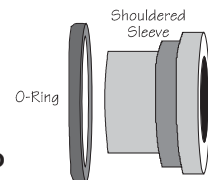


figure 1

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see figure 1).
2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjuster is at the bottom facing the right hand side of the motorcycle and the pressure valve is facing towards the rear wheel . Tighten shock bolts to the proper torque specifications (refer to authorized shop manual).

Caution: The installed spring length must never be set shorter than 5.25" or shock damage may occur.

<http://www.progressivesuspension.com>